



Recommended Door Knob Fitting Guide



Our screw and thread fittings are designed with a standard length, making them compatible with most doors and cupboards. As the thickness of doors, kitchen cupboard doors, wardrobe doors etc all vary we are able to cut spindle to required length for our customers.

When ordering online please fill out the spindle size and door depth option boxes. You can also email or give us these details over the phone.


Alternatively all door spindles, brass and steel threads can be cut down using a hacksaw if your doors are thinner.

Our door knobs and handles are suitable for both internal and external doors. For optimal fit, we recommend using a seven mm spindle with an optional eight mm sleeve.

If needed, we can customize the spindle length to your specified measurements.

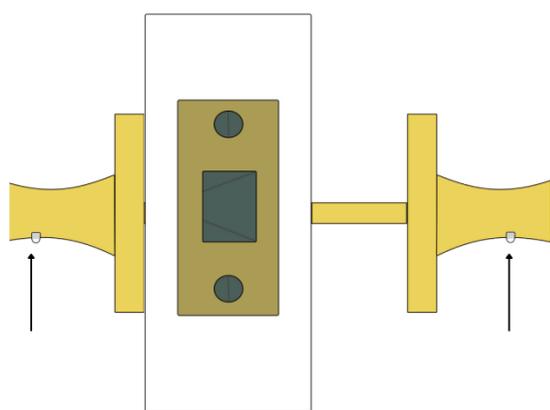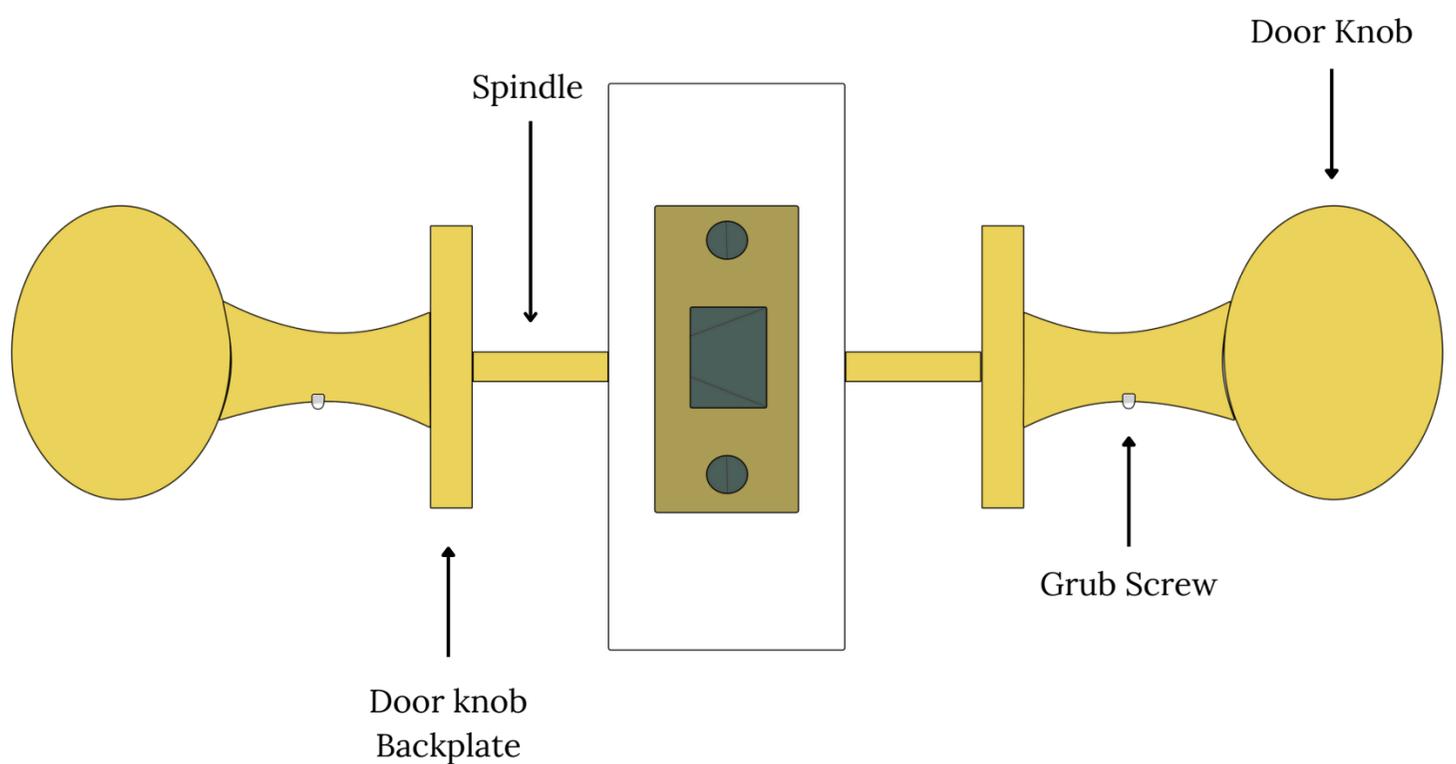

1) Keep in their sets with the grub screws facing down.

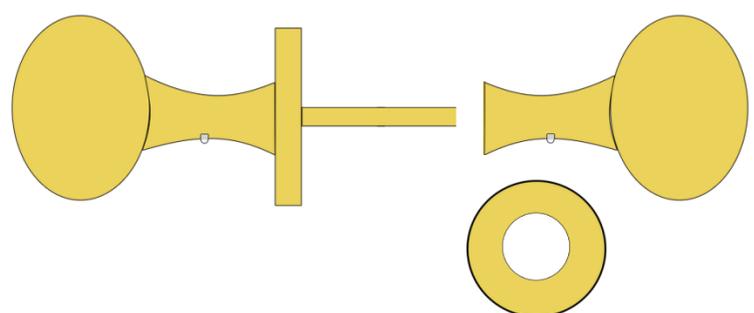


2) Remove one knob (and backplate).






Recommended Door Knob Fitting Guide

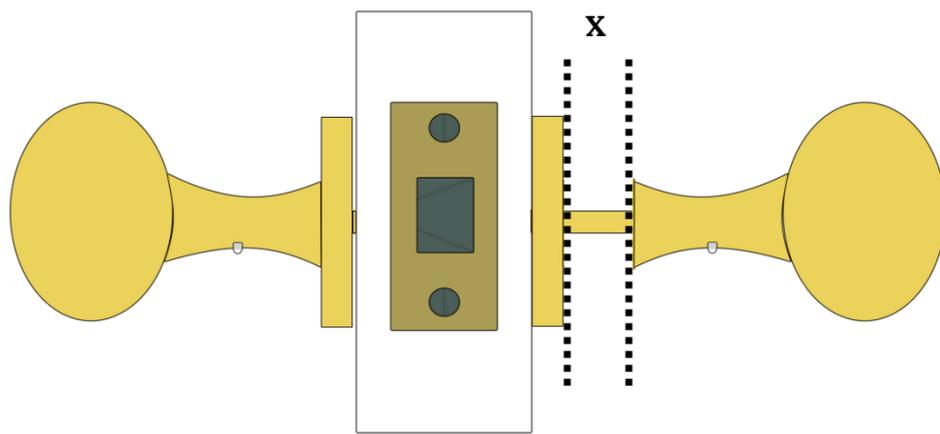


3) Place through the door and push the knob that you earlier removed back on until it is fully engaged. If there is a gap "X" take a note of the measurement.

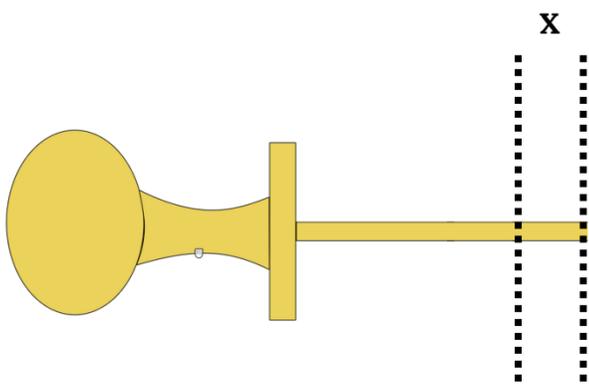


4) If required, cut "X" off of the spindle

5) Put the attached knob and spindle back through the door, push the second knob back on (fully engaged) and mark the spindle for the grub screw.

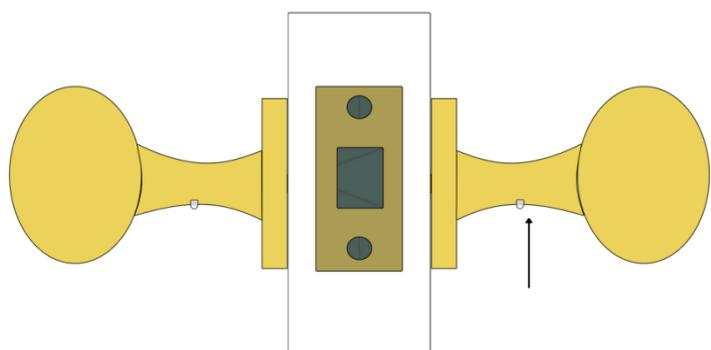




Recommended Door Knob Fitting Guide

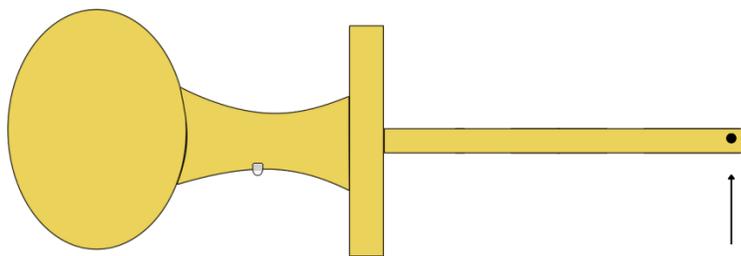

6) Drill a 4mm hole for the grub screw & ensure if a shim is used it is in the centre of the turn mechanism.

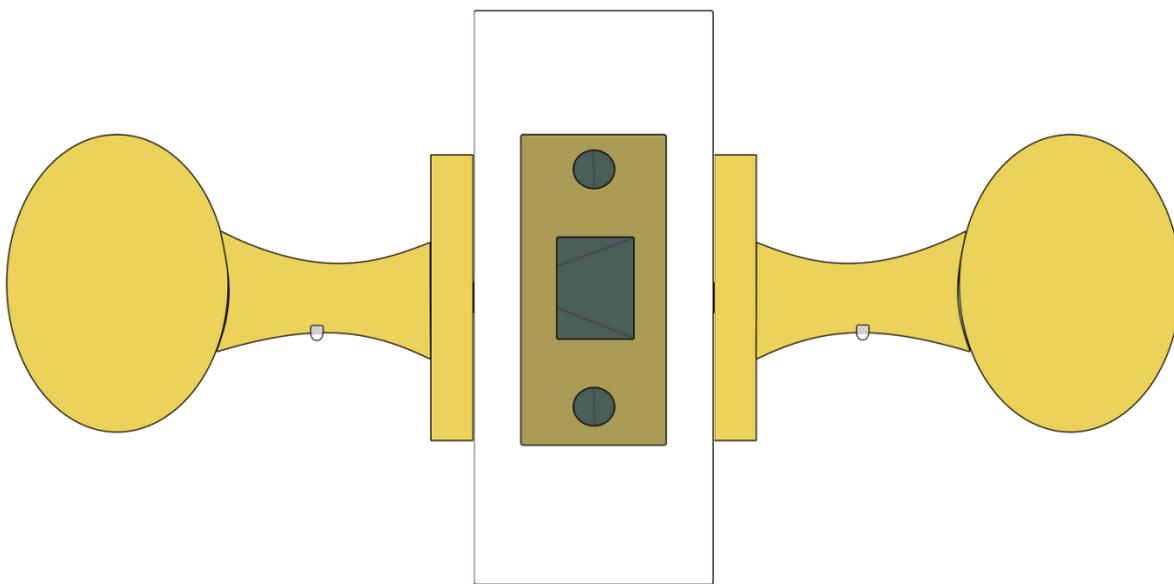

7) Place back through the door, ensure both knobs are fully engaged and secure using the grub screws.

Please note that this is only a recommended guide to fitting, Optimum Brasses always advises our hardware is fitted by a professional.